

WOOD

8



90 1/2
93 1/8


2 Spacers

7 5/8
5 5/8
3 5/8
1 7/8

29 1/8
30 5/8



SCREWS

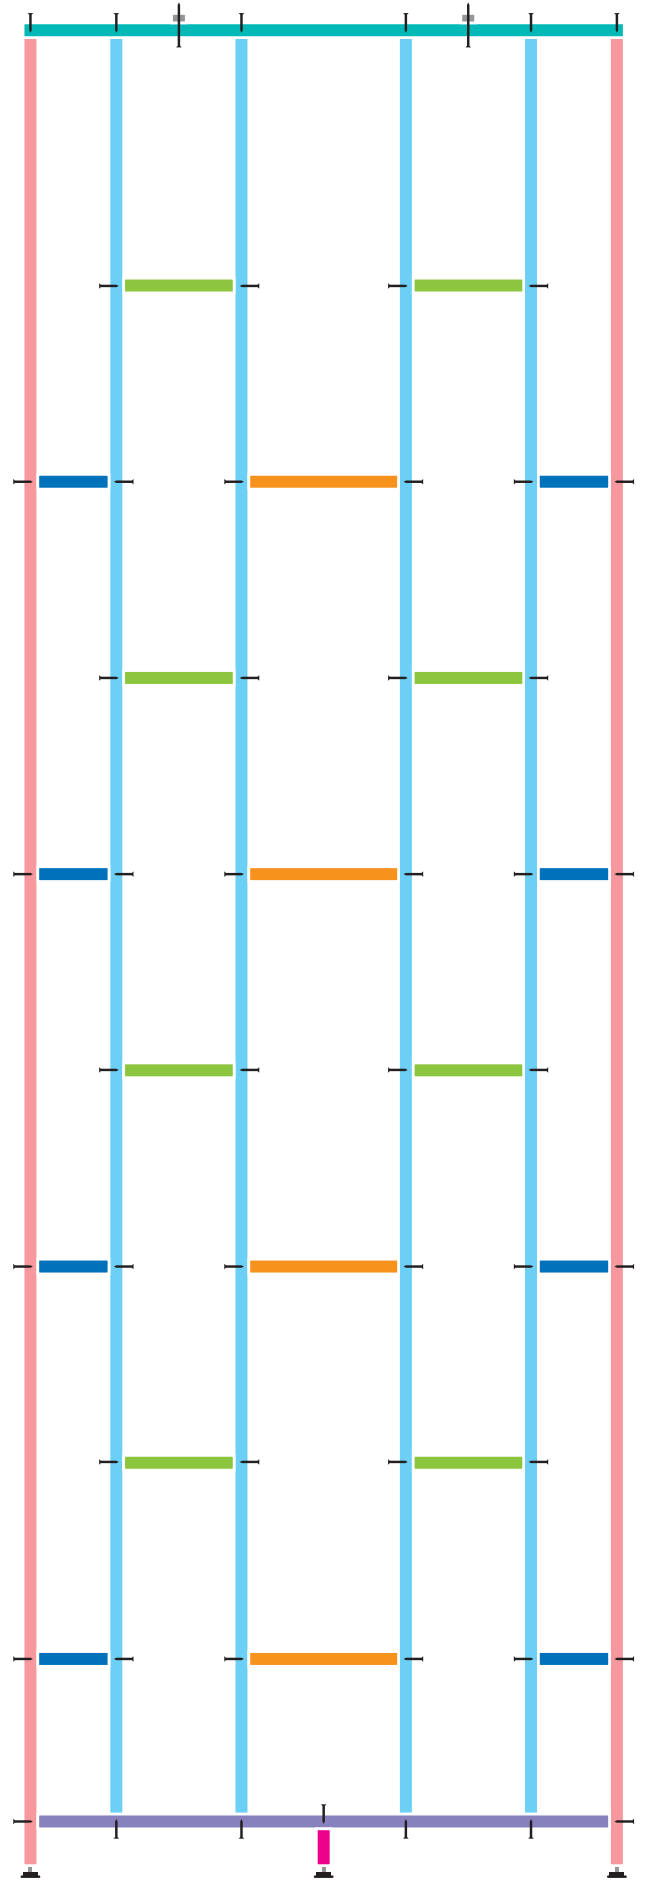


±95"

CUBES

FINAL SETUP

FRONT

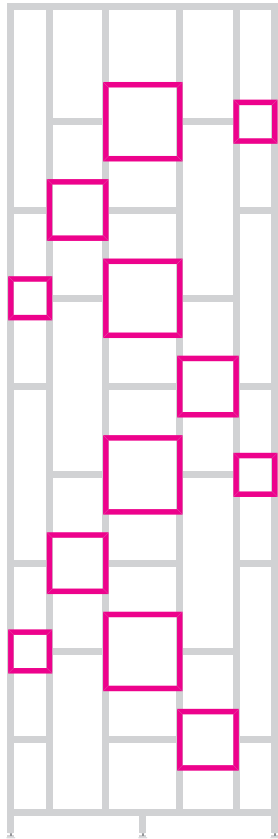

BACK

